



NetBlaster™ ZX440 Series User's Guide
*Fast Ethernet Adapters with Hot-Swap
for Compact PCI Systems*



ZNYX Networks
48421 Milmont Drive
Fremont, CA 94538
USA

Telephone: (510) 249-0800 or (800) 724-0911
Fax: (510) 646-2460
Email: sales@znyx.com
support@znyx.com
Web Site: www.znyx.com

NetBlaster ZX440 Series User's Guide
Document # DC0121-02

January 28, 2002

© 2000-2002 ZNYX Networks. All rights reserved worldwide. Information in this document is subject to change without prior notice. ZNYX, RAIN, RAINlink and NetBlaster are trademarks or registered trademarks of ZNYX Corporation in the United States and/or other countries. All other marks, trademarks or service marks are the property of their respective owners.

ZNYX may have patents, pending patent applications, trademarks, copyrights or other intellectual property rights covered in the subject matter of this document. By furnishing this document, ZNYX does not license nor waive its license to those intellectual property rights except as expressly provided in a written license agreement from ZNYX. Information in this document is subject to change without prior notice.

Thank you for choosing the ZNYX NetBlaster 440 Series CompactPCI (cPCI) Fast Ethernet Adapter. The NetBlaster 440 series is a fully featured product family of carrier Class CompactPCI Fast Ethernet adapters for high availability applications requiring state-of-the-art LAN interfaces. The 440 series features:

- Two or Four channel configurations, 3U or 6U form-factor
- Hot swap capability
- 64-bit data bus

Your adapter is designed to provide a lifetime of superior service in your system with cPCI slots.

NetBlaster ZX440 Series Fast Ethernet Adapter Models

Model	Fast Ethernet Channels	cPCI Slot
ZX442-U3	Two 10/100 Mbps	3U
ZX444-U3	Four 10/100 Mbps	3U
ZX442-U6	Two 10/100 Mbps	6U
ZX444-U6	Four 10/100 Mbps	6U

Documentation and Software

Documentation and software for the NetBlaster adapter is distributed electronically. You can retrieve most recent drivers and documentation and drivers from the ZNYX web site, www.znyx.com in the driver download section. Please contact ZNYX Customer Support at (800) 724-0911 if you have trouble locating the appropriate driver or installation documentation.

Installation Procedure

There are two basic steps you need to follow to operate the NetBlaster adapter.


1. Install the hardware (NetBlaster adapter).
2. Install the driver.

Hardware Installation

Below are the steps necessary to install a NetBlaster adapter into a standard cPCI system.

Installing the Hardware

This procedure is for installing NetBlaster 440 Series cPCI adapter into a system with an available cPCI slot. Some steps in this procedure may vary depending on the specific system used. Refer to the system's documentation if necessary. The figure below shows the installation of an adapter in a typical system.

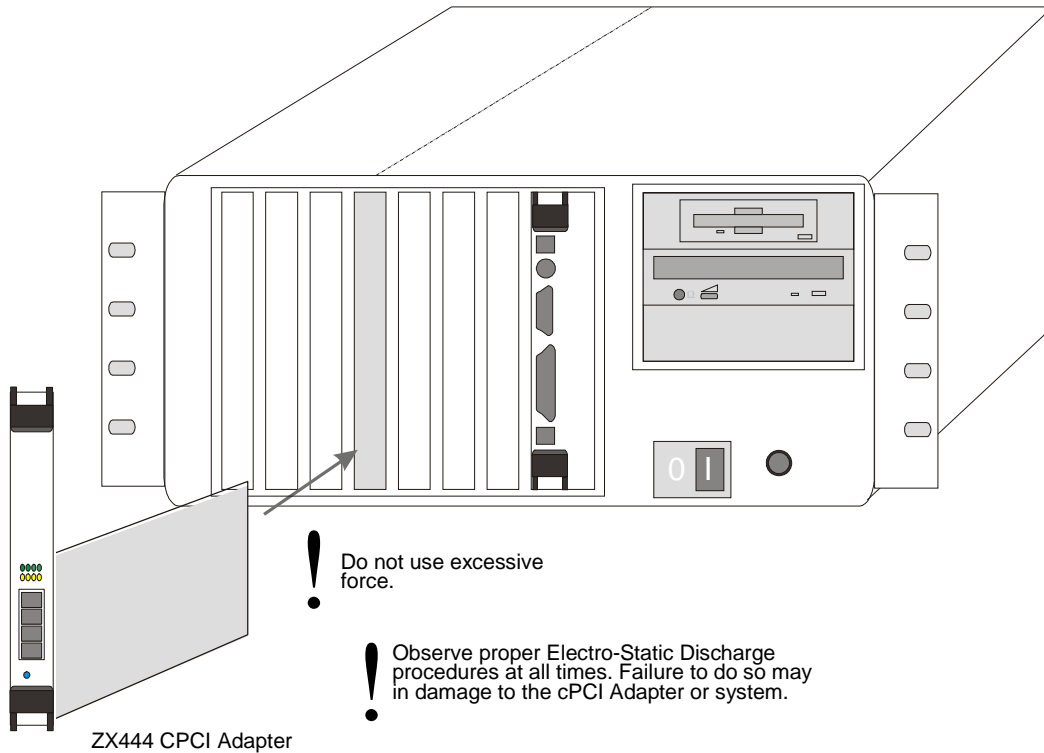

1. Turn off your system.
2. Discharge any static electricity from your body by touching the metal chassis, or by using an anti-static wrist strap. If you do not have a ground strap, maintain physical contact with the case to maintain the same electrical potential with the system.
3. Select an available CompactPCI slot to install the ZNYX NetBlaster adapter. Remove the slot cover from the front panel.
4. Insert the ZNYX adapter into the slot. Make certain that you push the adapter straight into the slot; the bracket and the slot must be properly aligned and the adapter fully seated. The bracket is well seated when it touches the system case up to the extraction levers.
5. Pull up on the extraction levers to finish seating the adapter, and secure the retention screws.

LAN Cable Connection

The LAN cable must be properly attached to a functioning network for the adapter to operate. 100 Mbps connections require Category 5 cabling. There are two ways to connect the system using twisted pair: (1) system to system; (2) direct system to hub or switch. You can connect your adapter directly to another system with a null cable. A null cable, or crossover cable, “crosses over” transmit and receive pairs.

You can connect your adapter directly to a hub or switch with an unshielded twisted-pair (UTP) cable. Make certain that the cable length is within the minimum and maximum length restrictions for Ethernet, or you could experience signal or data loss.

Driver Installation

This section covers driver installation for the NetBlaster adapter. At this stage the adapter should be secure in the system and all Ethernet cables should be attached. If this is not the case, return to the “Hardware Installation” procedure in the previous section.

Download the specific driver for your system from the ZNYX web site (www.znyx.com). Included on the web site with the driver are release notes with installation and configuration instructions. Follow the directions on line to configure the driver.

Running DOS Diagnostics

DOS-based diagnostics are also available from the ZNYX web site (www.znyx.com) to help troubleshoot hardware problems. If you believe you have a hardware problem, and have the capability to run DOS-based diagnostics, the steps below outline the use of the diagnostics.

Testing ZX440 Series Adapters in DOS

1. Run the diagnostic program to see if your adapter has been properly configured. Run DIAG442.EXE or DIAG444.EXE off your diskette by entering:

```
>DIAG444 LIST
```

2. You will see a list below. (This example is for the ZX444.)

```
DIAG444 Version 2.05 for ZNYX NetBlaster ZX444 4/100 Mbps adapter
(c) Copyright 1994-1999 ZNYX Corporation - All Rights Reserved.
PCI BIOS Information: Version=2.10, Config Mechanism=1, Last Bus=1
```

Bus	Dev	Fn	Vendor	Device	Rev	Type	Lat	IL	IRQ	Note
=====	=====	=====	=====	=====	=====	=====	=====	=====	=====	=====
0	0	0	8086	1250	03	Host Bridge	20	-	-	
0	7	0	8086	7000	01	PCI-ISA	00	-	-	
0	7	1	8086	7010	00	IDE	20	-	-	
0	9	0	1011	0046	01	Ethernet	73	A	10	ZX444
0	409	0	1011	0019	41	Ethernet	73	A	10	ZX444
0	509	0	1011	0019	41	Ethernet	73	A	10	ZX444
0	609	0	1011	0019	41	Ethernet	73	A	10	ZX444
0	709	0	1011	0019	41	Ethernet	73	A	10	ZX444
1	0	0	8086	7800	21	VGA	0	A	5	

3. You should see five Ethernet-type devices (one for the bridge, and one for each of the four ports), and the “Note” column should indicate the device to be a ZX444. Each should have an **IRQ** (interrupt line), **bus** value, and a unique **device** number. If so, your card has been automatically configured. Make a note of the *bus* and *device* numbers and go on to the software installation section.
4. To test all channels of your adapter, run DIAG444 for each bus number and device number. For example, to test the first two ports of the ZX444 listed above, the bus number is 0 and the device numbers are 409 and 509, run:

```
>DIAG444 0 409
>DIAG444 0 509
```

5. If the DIAG444 program says:

```
Running diagnostics for ZX444 channel at Bus #0, Device #409
Configuration: I/O=400E800, IRQ=10, Node=00C095C003D0, PROM=Version 4/AI
Diagnostics successfully completed.
```

each time, proceed with the software installation.

6. If the DIAG444 program does not indicate a successful completion, refer to the next section on Troubleshooting.

Troubleshooting

1. Make sure the board is securely seated in the slot.
2. Observe the LED's. Each port on the ZX440 series has a LINK (green) LED and an ACTIVITY (yellow) LED. The green LED illuminates upon successfully establishing a link. The yellow LED illuminates during transmit/receive activity. Note: In most cases, the driver must be properly loaded and configured to bring up the link. It is off if there is no link established.

The front panel also includes the industry-standard blue LED next to the bottom Hot-Swap ejector tab. The Hot Swap LED is ON during removal/insertion of adapter, signifying system readiness for transition

3. Refer to operating system specific documentation to evaluate any error messages or logs when the driver is loaded.

Technical Support

If you need further assistance after referring to this User's Guide, ZNYX has a professional technical support team available to answer your questions. Contact us at:

Telephone: (510) 249-0800 or (800) 724-0911
Fax: (510) 646-2460
Email: support@znyx.com
Website: www.znyx.com

You can reach us during normal business hours, Pacific Standard Time.

Appendix A: Legal Notices and Certification

FCC Class A Notice: NETBLASTER ZX440 SERIES

Modification to this product not authorized by ZNYX Corporation could void the FCC approval and negate your authority to operate the product.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if it is not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canada Compliance:

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérisé de la classe A est conforme à la norme NMB-003 du Canada.

CE Conformity:

The ZX440 Series is in compliance with the following standards:

EN 55022(1998) Class A
EN 55024 (1998)
EN 61000-4-11 (1995)
EN 60950 (1992) + Amendments 1, 2, 3, 4, and 11

THIS ADAPTER CARD IS FOR USE ONLY WITH COMPACT PCI BUS COMPATIBLE SYSTEMS THAT HAVE ENCLOSED POWER SUPPLIES WITH SELV OUTPUTS AND INSTALLATION INSTRUCTIONS DETAILING USER INSTALLATION OF CARD CAGE ACCESSORIES.

Manufacturer Name: ZNYX Networks
Manufacturer Address: 48421 Milmont Drive Fremont, CA 94538

Warranty

ZNYX Corporation warrants to the original purchaser of any ZNYX NetBlaster PCI, PMC, or Compact PCI Fast Ethernet adapter product that is to be free from defects in workmanship and materials, under normal use and service, for the lifetime of the personal computer in which it is installed from the date of purchase from ZNYX or its authorized dealer. In order for this warranty to be valid, this hardware product must remain in its original personal computer and be registered with ZNYX within one year of purchase. Otherwise, ZNYX warrants to the original purchaser of this hardware product that it is to be in good working order for a period of thirty-six (36) months from the date of purchase from ZNYX or an authorized dealer.

Should this product, in ZNYX's opinion, malfunction during the applicable warranty period, ZNYX will, at its expense, repair the defective product or part or, at its option, deliver to the Customer an equivalent product or part to replace the defective item. To prevent damage in transport, the Customer must return the product in its original packaging or, if this is not available, other protective packaging approved in advance by ZNYX. All returned products will become the property of ZNYX. At ZNYX's option, replacement parts may be new or reconditioned. Any replaced product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer.

This limited lifetime warranty applies to the following ZNYX products only ZX442 and ZX444. ZNYX warrants all other product(s) for a period of thirty-six (36) months from the date of purchase from ZNYX, under the same limited warranty terms and conditions.